



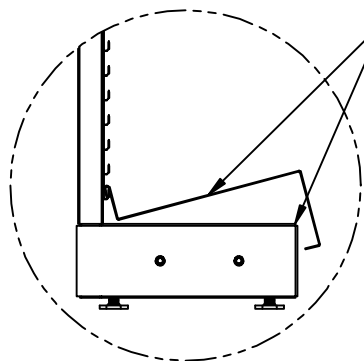


SNAP METAL DECK DOWN
UNTIL IT IS SECURE

SIDE VIEW

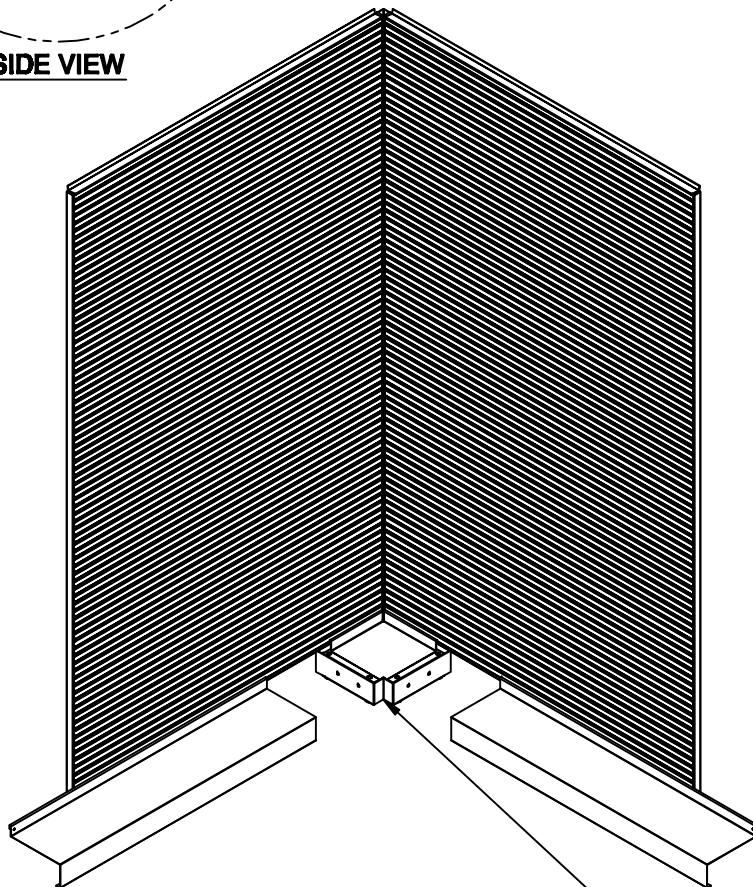

ASSEMBLY VIEW

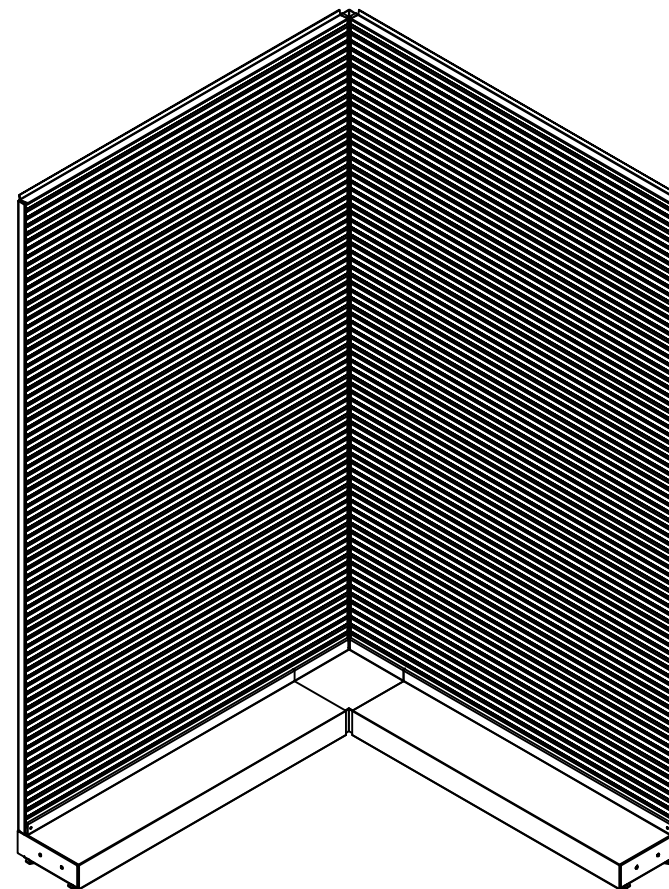

FINISHED VIEW

NOTE:
MAKE SURE THAT YOU PLACE METAL DECK AFTER
ALL LEGS ARE BOLTED TOGETHER AND LEVELED

MAKE SURE TO PLACE THE
SYSTEM 88 CORNER BASE INTO
PLACE FIRST BEFORE
INSTALLING THE METAL DECKS

UNIWEB INC.
We Create Space

12 So. Promenade Ave. Corona Ca, 92679 (951) 279-7889 1-800-4-UNIWEB UNIWEBINC.COM

System 88 Corner Metal Deck

Installation

9 OF 84